



NOTE: SPARE SPRINKLER HEAD(S) TO BE LOCATED INSIDE THE ACCESS PANEL.

SCALE: NTS